


Typ
Type

AT-C18

(Art.-Nr. 12100285)

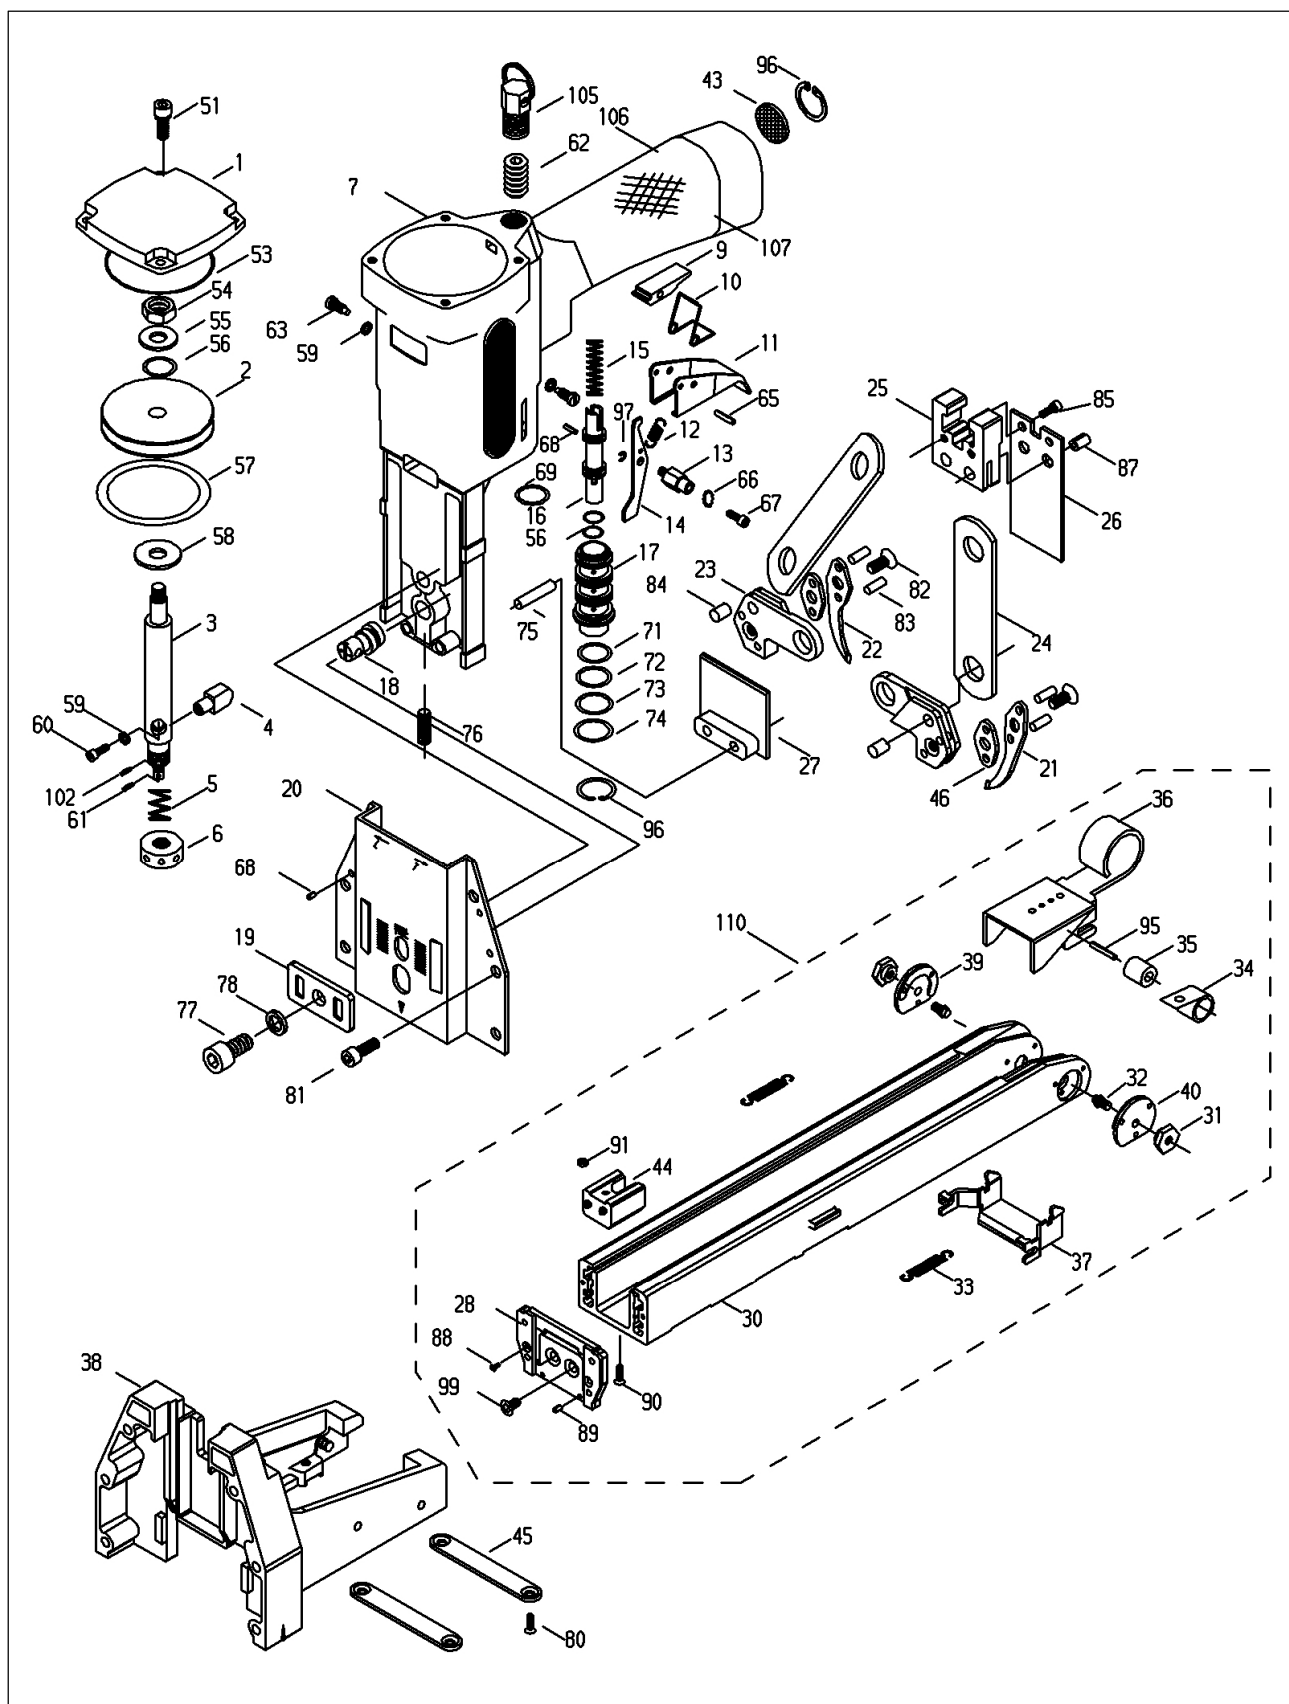

1	Kappe Cap Capuchon Cabeza	14505873	23	Greiferführung Teeth seat Guidage du preneur Guia del mecanismo de arrastre	14505899	51	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	14505938	80	Senkschraube Countersunk screw Vis creuse fraisée Tornillo avellanado	13301272
2	Kolben Piston Piston Piston	14505874	24	Platte Plate Conventure Tapa	14505900	53	O-Ring O-ring Joint torique Aro torico	13302850	81	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	14505943
3	Kolbenstange Piston shaft Tige du piston Vastago del piston	14505875	25	Verriegelung Block Verrouillage Bloqueo	14505901	54	Sechskantmutter Hexagon nut Ecrou 6-pans Tornillo hexagonal	13301357	82	Senkschraube Countersunk screw Vis creuse fraisée Tornillo avellanado	13301271
4	Anschlag Block Butoir Tope	14505876	26	Treiber 32 Driver 32 Marteau 32 Lengueta 32	14505902	55	Scheibe Washer Rondelle Arandela	14505939	83	Stift Pin Axe Pasador	14505944 14505945
5	Feder Spring Ressort Muelle	14505877	27	Abdeckung Cover Cache Tapa	14505966	56	O-Ring	13300008	85	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	14505989
6	Einstellmutter Collar Ecrou ajusteur Tuerca de ajuste	14505878	28	Treiberführung 32 Driver guide 32 Guide-marteau 32 Guia martillo 32	14505967	57	O-ring Joint torique Aro torico	13302851	87	Spannhülse Split pin Douille fendue Pasador elastico	13302859
7	Gehäuse Body Corps Cuerpo	14505879	30	Magazin 32 Magazine 32 Chargeur 32 Carga 32	14505971	58	Scheibe Washer Rondelle Arandela	13300470	88	Senkschraube Countersunk screw Vis creuse fraisée Tornillo avellanado	13301072
9	Anschlag Block Butoir Tope	14505880	31	Mutter Rod nut Ecrou 6-pans Tornillo hexagonal	14505974	59	Federring Spring washer Rondelle élastique Arandela muelle	13300373	89	Spannhülse Split pin Douille fendue Pasador elastico	13300239
10	Feder Spring Ressort Muelle	14505881	32	Bolzen Bolt Boulon Bulon	14505975	60	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	13301102	90	Senkschraube Countersunk screw Vis creuse fraisée Tornillo avellanado	13301078
11	Auslöser Trigger Lever de détente Gatillo de disparo	14505882	33	Zugfeder Tension spring Ressort de traction Muelle de traccion	14505976	61	Spannhülse Split pin Douille fendue Pasador elastico	13302852	91	Sicherungsmutter Safety nut Ecrou de sûreté Tornillo de seguridad	13300437
12	Zugfeder Spring Ressort de traction Muelle de traccion	14505883	34	Rollfeder Roller spring Ressort enroulé Muelle espiral	14505977	62	Gewindestift Grub screw Douille fendue Tornillo de presión	13302853	95	Spannhülse Split pin Douille fendue Pasador elastico	13300261
13	Bolzen Bolt Boulon Bulon	14505884	35	Rolle Pulley Rouleau Rodillo	14505978	63	Schraube Trigger screw Vis Tornillo	14505940	96	Sicherungsring C-Ring Clips Aro de seguridad	13302861
14	Auslösebügel Safety yoke Palpeur de sécurité Estríbo de seguridad	14505885	36	Vorschieber 32 Pusher 32 Chariot 32 Empujador 32	14505979	65	Spannhülse Split pin Douille fendue Pasador elastico	13300253	97	Sicherungsscheibe E-Ring Clips Clip	13300347
15	Druckfeder Compression spring Ressort à pression Muelle de presión	14505886	37	Klammerführung Bracket Cale de guidage Rail guia	14505982	66	Zahnscheibe Outside teeth washer Rondelle à dents Arandela dentada	14505941	99	Senkschraube Countersunk screw Vis creuse fraisée Tornillo avellanado	13301272
16	Ventil Valve Soupape Valvula	14505887	38	Magazingehäuse Magazine seat Chargeur Carga	14505983	67	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	13301284	102	Stift Pin Axe Pasador	14505947
17	Ventilkörper Valve body Corps de soupape Casquillo válvula	14505888	39	Vorschieberführung, re Driver guide, right Guide chariot, droite Guia empujador, derecha	14505984	68	Spannhülse Split pin Douille fendue Pasador elastico	13300248	105	Aufhängung Nailer hanging Suspension Colgador clavadora	14505949
18	Einstellschraube Adjusting screw Vis ajusteur Dial de ajuste	14505889	40	Vorschieberführung, li Driver guide, left Guide chariot, gauche Guia empujador, izquierda	14505985	69	O-Ring	13300011	106	Griffband Grip end tape Ruban pour la poignée Banda para el mango	14406050
19	Einstellplatte Adjusting plate Plaque d'adjustage Tapa de ajuste	14505890	43	Schalldämpfer Silencer Amortisseur de bruit Silenciador	14505950	71	O-ring	13302854	107	Griffband 2 Grip end tape 2 Ruban pour la poignée 2 Banda para el mango 2	14406099
20	Frontplatte Front plate Conventure Cubierta protectora	14505891	44	Anschlag Bracket Butoir Tope	14505986	72	Joint torique	13302855	110	Magazin Magazine Chargeur Carga	14509475
21	Greifer, rechts 19 Right teeth19 Griffe, droite 19 Mordaza derecha 19	14505893	45	Platte Plate Conventure Tapa	14505987	73	Aro torico	13302856			
22	Greifer, links 19 Left teeth 19 Griffe, gauche 19 Mordaza izquierda 19	14505896	46	Scheibe Washer Rondelle Arandela	14505988	74		13302857			
						75	Bolzen Bolt Boulon Bulon	14505942			
						76	Gewindestift Grub screw Douille fendue Tornillo de presión	13302858			
						77	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	13301150			
						78	Federring Spring washer Rondelle élastique Arandela muelle	13300376			