


EXPLODED DIAGRAM OF JN45R

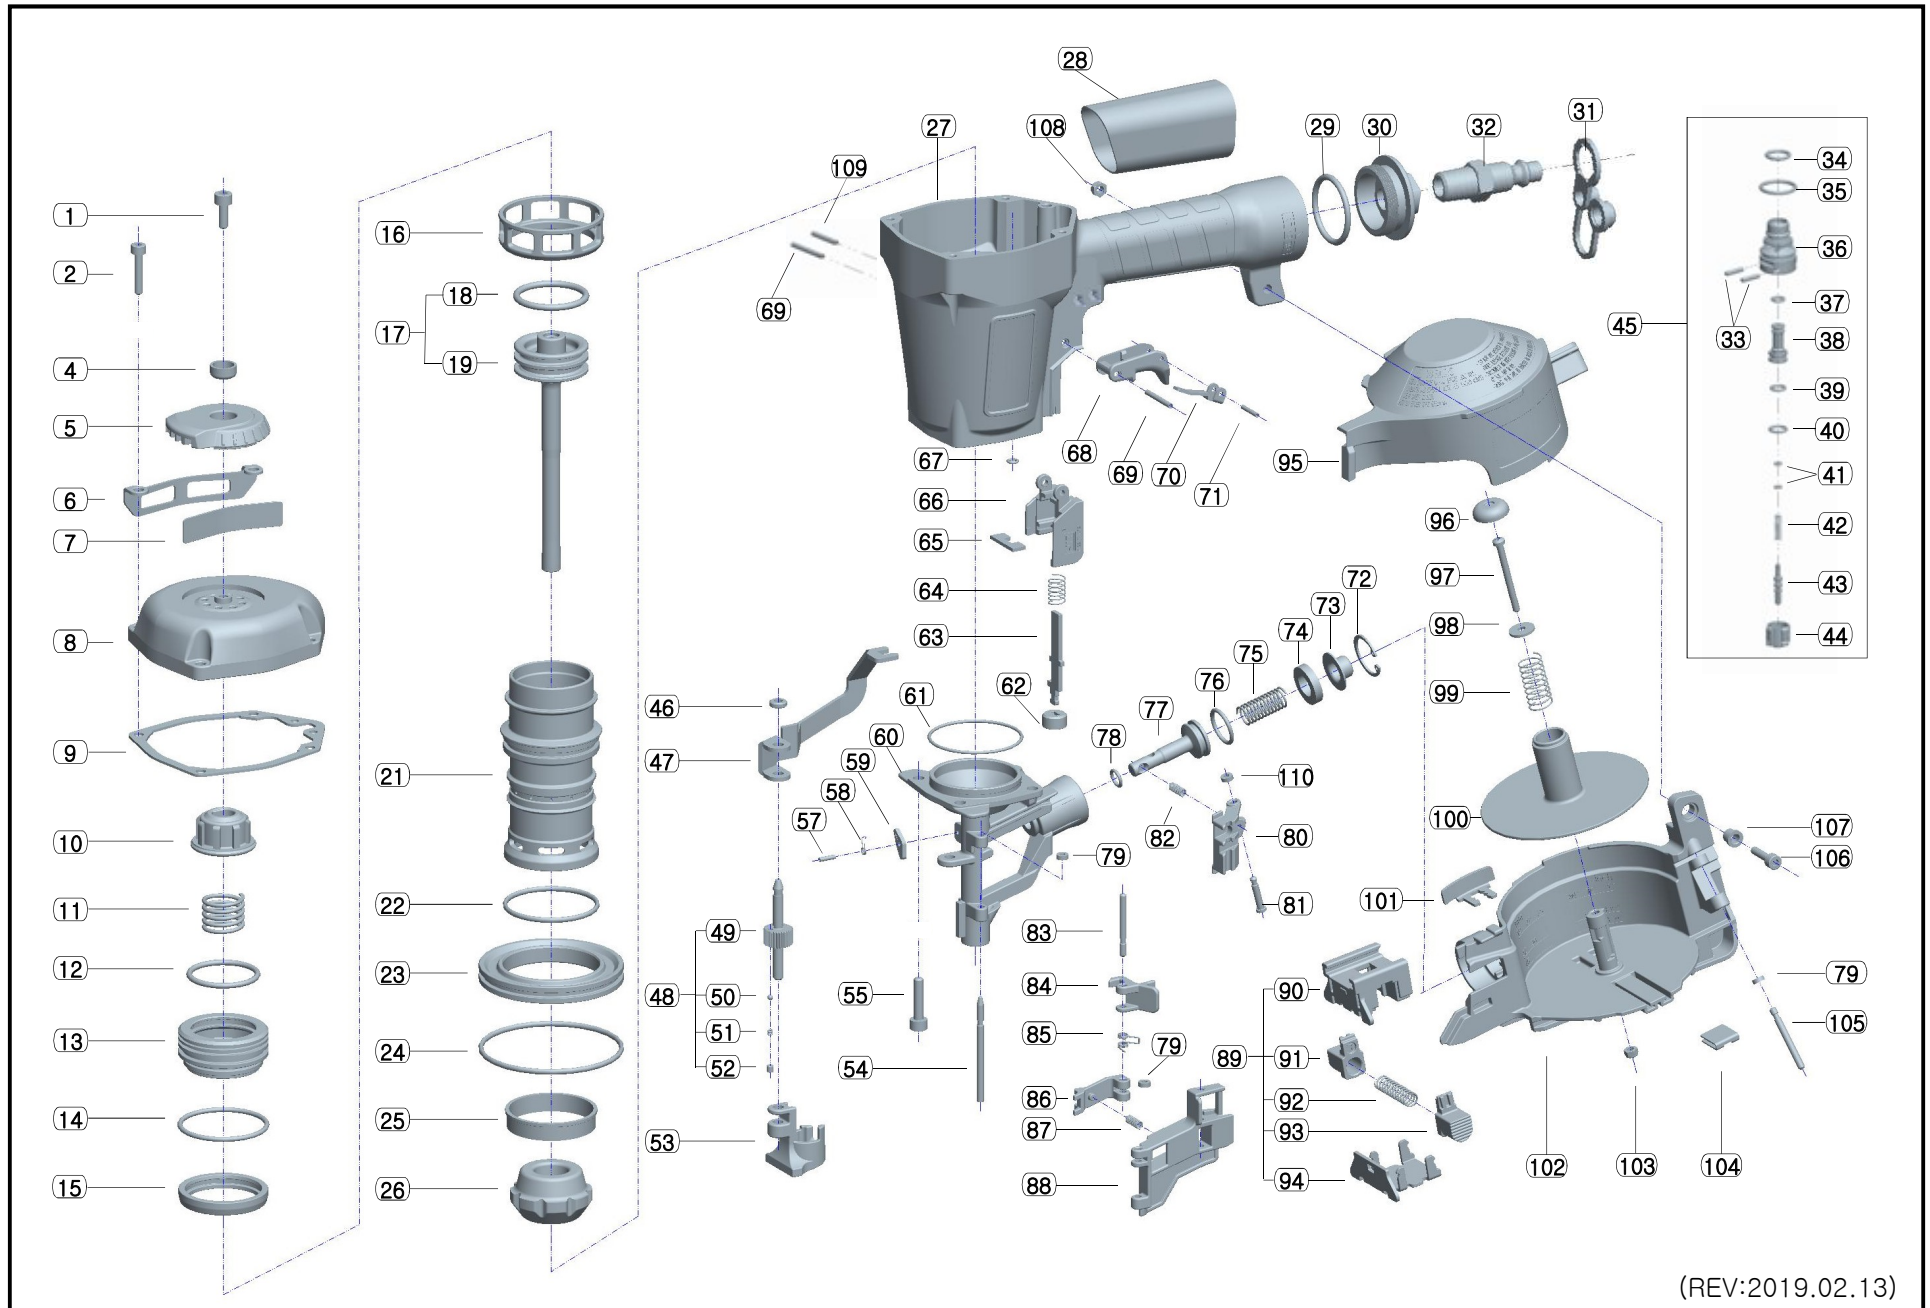

(REV:2019.02.13)

JN45R (3/4" TO 1-3/4" ROOFING COIL NAILER)

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	BOLT (M6X15L)	Z-06-150	1	39	VALVE PLUNGER O-RING (MID)	CT64-V-005	1	76	FEED PISTON O-RING (SLIP)	JN45R-G-013	1
2	BOLT (M5X25L)	Z-05-250	4	40	VALVE PLUNGER O-RING (LOW)	NV-V-006	1	77	FEED PISTON	JN45R-G-012	1
4	EXHAUST COVER WASHER	CT64-C-007	1	41	PLUNGER O-RING	CT64-V-008	2	78	FEED PISTON O-RING (SEAL)	JN45R-G-014	1
5	EXHAUST COVER	JN45R-C-003	1	42	PLUNGER SPRING	CT64-V-009	1	79	PIN RETAINER	JN45R-M-008	4
6	GUARD PLATE	JN45R-C-004	2	43	PLUNGER	NV-V-010	1	80	FEED PAWL	JN45R-G-004	1
7	NON-SLIP PAD	JN45R-C-005	2	44	PLUNGER CAP	NV-V-012	1	81	FEED PAWL PIN	JN45R-G-006	1
8	CAP	JN45R-C-001	1	45	VALVE SET	NV-V-P001	1	82	FEED PAWL SPRING	JN45R-G-005	1
9	GASKET	JN45R-C-002	1	46	DEPTH DIAL RETAINER	JN45R-S-017	1	83	CHECK PAWL PIN	JN45R-G-009	1
10	STOPPER	JN45R-H-005	1	47	CONTACT ARM	JN45R-S-001	1	84	DOOR LATCH	JN45R-G-010	1
11	HEAD VALVE SPRING	JN45R-H-006	1	48	DEPTH DIAL SET	JN45R-S-P001	1	85	DOOR LATCH SPRING	JN45R-G-011	1
12	HEAD VALVE O-RNG (IN)	JN45R-H-003	1	49	DEPTH DIAL	JN45R-S-010	1	86	CHECK PAWL	JN45R-G-007	1
13	HEAD VALVE	JN45R-H-001	1	50	BALL (Φ3.2)	B-032	1	87	CHECK PAWL SPRING	JN45R-G-008	1
14	HEAD VALVE O-RNG (OUT)	JN45R-H-004	1	51	BALL SPRING	JN45R-S-012	1	88	DOOR	JN45R-G-002	1
15	HEAD VALVE SEAL	JN45R-H-002	1	52	SET SCREW (M4X4L)	ZS-04-040	1	89	SHINGLE GAUGE SET	JN45R-L-P001	1
16	COLLAR	JN45R-A-004	1	53	CONTACT FOOT	JN45R-S-015	1	90	SHINGLE GAUGE BODY	JN45R-L-001	1
17	PISTON SET	JN45R-P-P001	1	54	DOOR PIN	JN45R-G-003	1	91	CLICK LEVER_L	JN45R-L-003	1
18	PISTON O-RING	JN45R-P-003	1	55	BOLT (M6X20L)	ZN-06-200	4	92	CLICK LEVER SPRING	JN45R-L-004	1
19	PISTON ASSEMBLY	JN45R-P-P002	1	57	ROLL PIN (Φ2.5X10L)	R-25-100	1	93	CLICK LEVER_R	JN45R-L-002	1
21	CYLINDER	JN45R-A-001	1	58	NAIL STOPPER SPRING	JN45R-G-019	1	94	SHINGLE GAUGE PLATE	JN45R-L-005	1
22	CYLINDER O-RING	JNS45-A-005	1	59	NAIL STOPPER	JN45R-G-018	1	95	MAGAZINE COVER	JN45R-M-002	1
23	CYLINDER GUIDE	JN45R-A-002	1	60	NOSE	JN45R-G-001	1	96	PLATFORM CAP	JN45R-M-016	1
24	CYLINDER GUIDE O-RING	CT64-A-006	1	61	NOSE O-RING	JN45R-B-010	1	97	BOLT (ROUND HEAD M4X45L)	ZR-04-450	1
25	SUPPLY HOLE SEAL	JN45R-A-007	1	62	RETAINER	CT64-S-006	1	98	RING PLATE	JN45R-M-015	1
26	BUMPER	JN45R-A-003	1	63	CONNECTOR	JN45R-S-002	1	99	PLATFORM SPRING	JN45R-M-004	1
27	BODY	JN45R-B-001	1	64	CONNECTOR SPRING	JN45R-S-004	1	100	PLATFORM	JN45R-M-003	1
28	GRIP	JN45R-B-004	1	65	CONNECTOR HOLDER	JN45R-S-005	1	101	PROTECTOR_R	JN45R-M-017	1
29	END CAP O-RING	422-B-003	1	66	CONNECTOR HOUSING	JN45R-S-003	1	102	MAGAZINE BODY	JN45R-M-001	1
30	END CAP	422-B-002	1	67	FEEDING LINE HOLE SEAL	JN45R-B-009	1	103	LOCK NUT (for M4)	NN-04	1
31	PLUG CAP	9032-B-006	1	68	TRIGGER A (OUT)	JN45R-T-001	1	104	PROTECTOR_L	JN45R-M-018	1
32	AIR PLUG	9032-B-005	1	69	ROLL PIN (Φ3X28L)	R-30-280	2	105	MAGAZINE PIN	JN45R-M-007	1
33	PIN (ø3x14.2L)	NV-V-013	2	70	TRIGGER B (IN)	JN45R-T-002	1	106	BOLT (M5X20L)	Z-05-200	1
34	VALVE O-RING	NV-V-001	1	71	ROLL PIN (Φ2.5X16L)	R-25-160	1	107	BUSHING	JN45R-M-019	1
35	PLUNGER CAP O-RING	CT64-V-011	1	72	SNAP RING (Φ24)	IS-240	1	108	LOCK NUT (for M5)	NN-05	1
36	VALVE	NV-V-003	1	73	FEED PISTON CAP	JN45R-G-017	1	109	ROLL PIN (Φ3.0X22L)	R-30-220	1
37	VALVE PLUNGER O-RING (UP)	NV-V-004	1	74	FEED PISTON BUMPER	JN45R-G-015	1	110	PIN RETAINER	CS26/38-G-008	1
38	VALVE PLUNGER	NV-V-007	1	75	FEED PISTON SPRING	JN45R-G-016	1				

** All the parts of nailer can be changed for improvement and re-design without announcement.

(REV. : 2019/02/13)